
Product Parameters:

Product Name: Ultraviolet Disinfection Lamp
Model: UVIR35H
Rated power: 36W
Rated voltage: 110V/220V
Timing Mode: Timer setting+ remote control
Warranty: 1 year
Application area: 0-60 m²



Applications:


Treatment of air in waste management facilities.
Removal of "bad air" in factories and adjacent offices.
Food storage facilities (cheese, wine, vegetables, fruits.meat, etc..).
Clinical environments such as clinics, hospitals, operating rooms, dental surgeries, schools, holding facilities
Laboratoria and testing facilities that require a clinically clean environment,
Food processing plantations.
Decontamination of storage facilities.

Benefits:

Effective in the prevention of Tuberculosis, MRSA, H1N1 and other airborne cross contamination.
Eliminates 99.9% of bacteria, yeast, mold and fungus problems found in hospitals, schools, food manufacturing plants and offices.
Recommended by medical expertsKills harmful bacteria in closed premises
Reduces asthmatic effects
Eliminates odours and neutralizes the air.

How to Operate the unit:

Connect the power cord to the socket.
Press the ON/OFF button to switch on the unit.
The power LED and the 3 timer LEDs will flicker
Press the Timer button to select the time (15, 30 or 60 minutes).
Press the ON/OFF button again and the LEDs will stop flickering.
Leave the room. The UV-C lamp will start working automatically within 10 seconds
Can also be operated with the remote control the unit.
Control diagram is as follows:

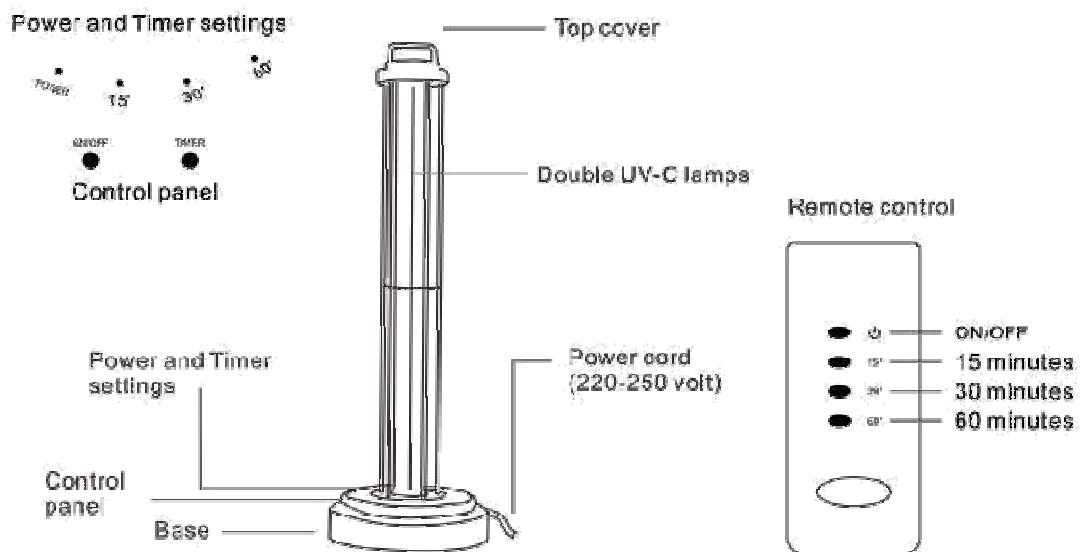

How to replace the UV-C bulb:

- Disassemble the 3 screws at the side of the UV-C bulb
- Take off the bulb protection cover.
- Replace with a new bulb
- Assemble the bulb protection cover with the 3 screws.
- Avoid breaking the bulb after removal

Disposal / Recycling:

UV-C lamps contain mercury (a hazardous waste). Do not discard these lamps in the trash. Disposal must be made in accordance with local, state and federal regulations. Contact the local hazardous waste management authority for proper recycling / disposal instructions.

Special Reminder:

Don't look directly at the UV-C lamp source. It should be used without people, pets or plants. Ultraviolet radiation may cause skin erythema, conjunctiva irritation and fatigue. Long-term exposure to ultraviolet rays will burn people's skin and eyes, and long-term inhalation of ozone will harm people. For disinfection, doors and windows must be closed, and people, pets and animals must leave.

Ozone is a very unstable gas, which usually decomposes into oxygen in the air for 30-40 minutes. After the lamp is turned on, please do not approach it. People / animals leave the disinfection space. Ventilate the room for 40 minutes after disinfection.